


4079 Electro valve E50 DUO



4482 Windows Desktop Controller

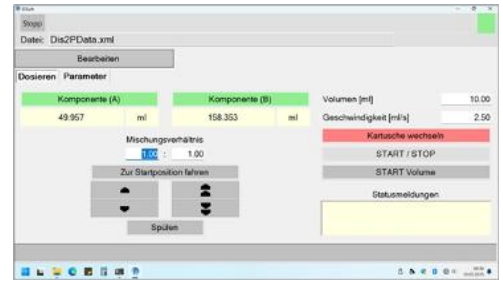

2410 Stand, big



Start can be initiated via an external switch with an emergency stop

Description

Dosage from 50 ml DUO cartridges, 1:1

Driven by a gear-driven servomotor with a ball screw.

Independent piston movement.


Mixing ratio freely selectable via separately controlled spindle motors.

A retraction cycle relaxes the dispensing material in the cartridge, thereby preventing dripping.

Adjustable parameters (dosing quantity, dosing speed, etc.) via the controller.

4079 Electro valve E50 DUO

Dimensional drawing (Dimensions in mm)

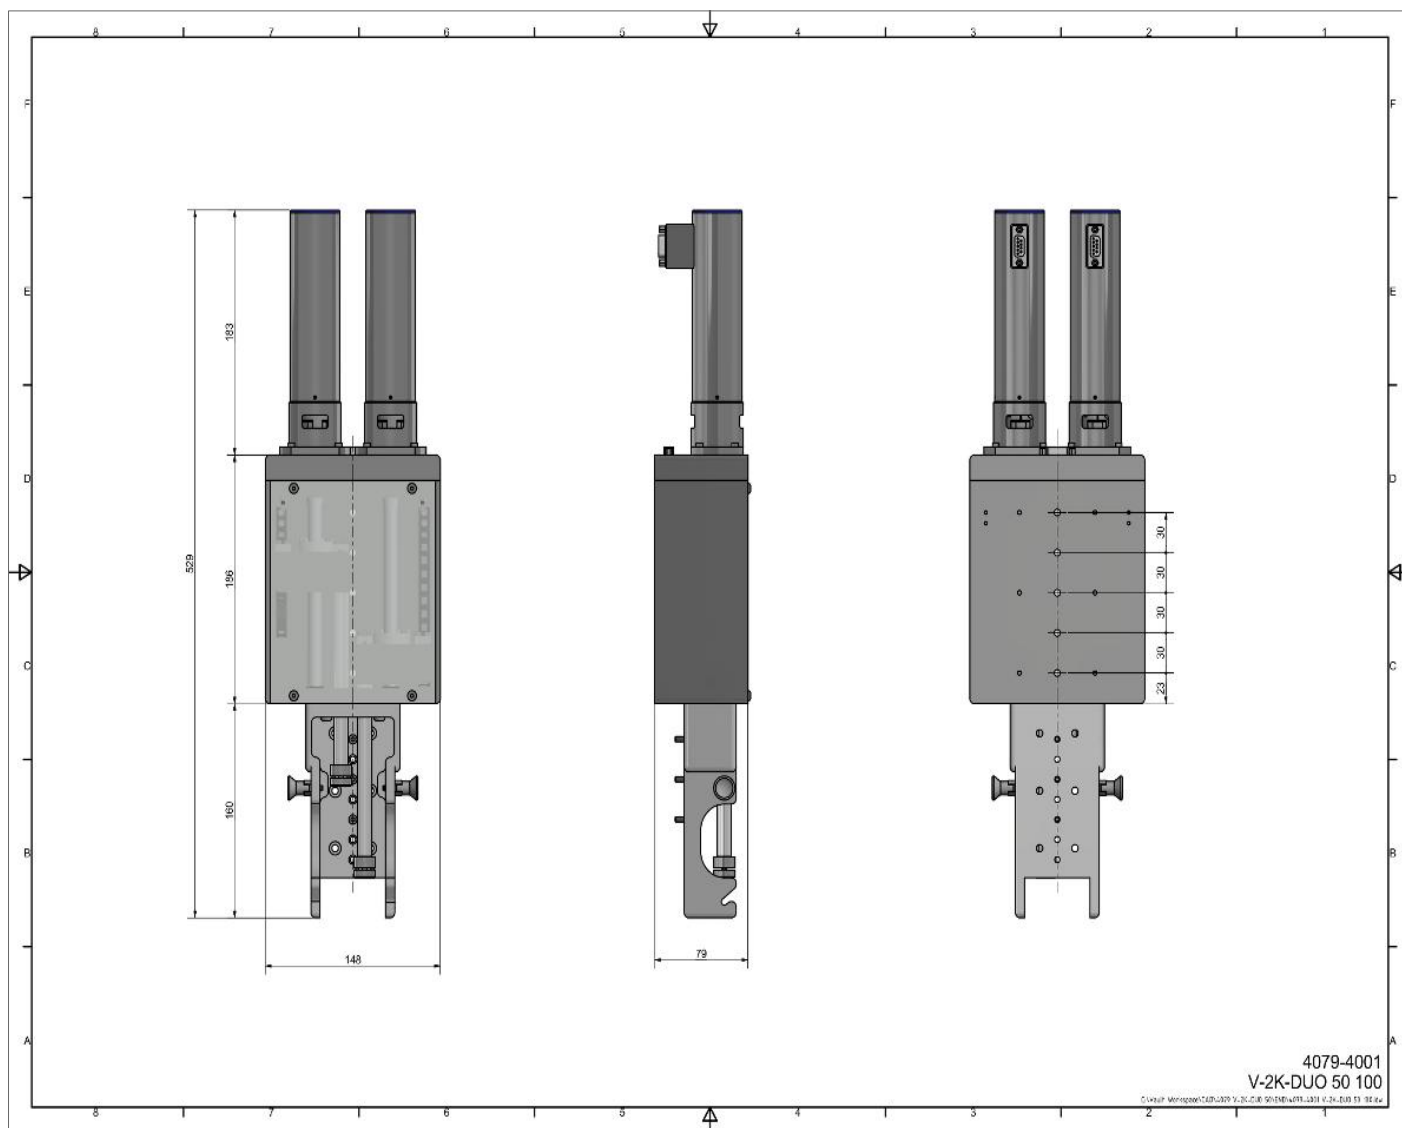

Cartridge size (DUO)	50 ml
Dosing accuracy	+/- 0,02 ml (material depending)
Dosing speed	0,01 – 0,5 ml/s
Dosingvolume min.	0,1 ml
Viscosity	Low to high viscous dosing media
Dimensions	529 x 148 x 79 mm
Weight	5,8 kg